 
 
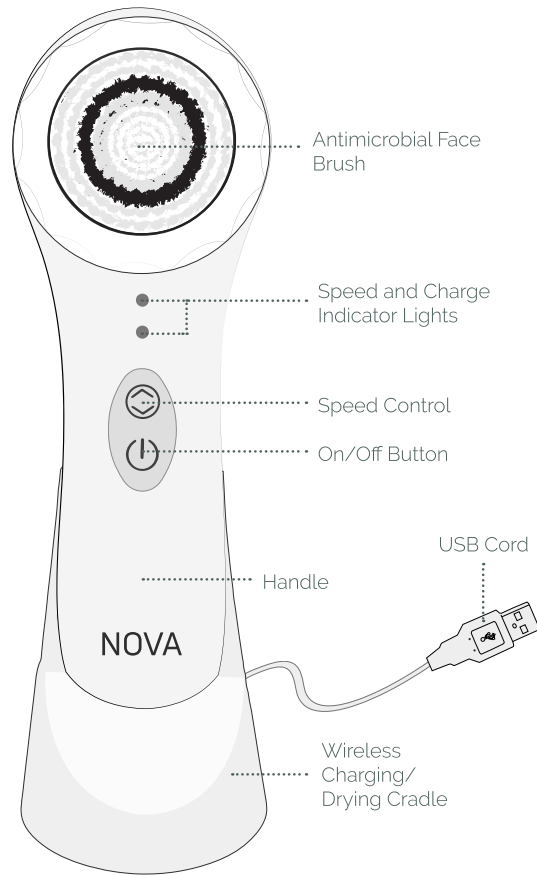 
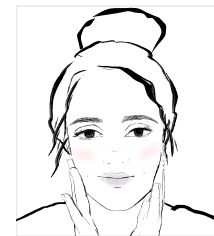 


A Closer Look
NOVA

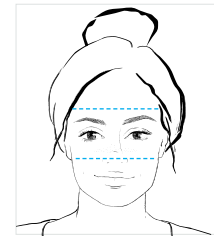

The NOVA features true patented sonic technology and is gentle and effective for all skin types vs. a rotating battery operated spinning brush which has been proven to be abrasive and stretches the skin.

Usage Guide
NOVA

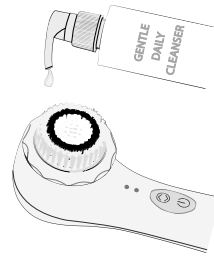




*See Expert Advice on opposite side before using NOVA for the first time.

1. Apply your favorite cleanser onto a wet NOVA Brush Head.
2. Press the On/Off button to activate your NOVA and select the speed setting just right for you. We recommend starting on low until your skin becomes accustomed to a higher speed.

*Please note that NOVA does not spin or vibrate. State-of-the-art Sonic technology makes it oscillate 300 times per second, 18,000 times per minute.

3. To ensure a standardized cleanse with even results, the best practice is to divide your face into 3 sections. Start at the forehead section and glide NOVA in circular motions until you hear the Automatic Timer signaling you to move to the next section. Repeat until all 3 sections of the face are cleansed.
4. Now you are ready to rinse your face clean and pat dry. Proceed with the rest of your skin care regimen. Rinse and clean brush head with a gentle cleanser.

Charging
NOVA

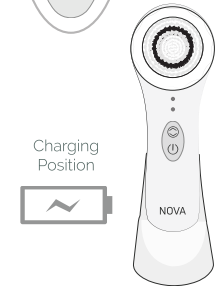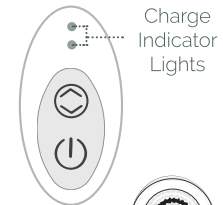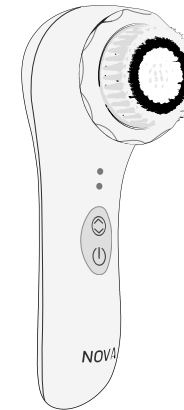


1. The NOVA is cordless and rechargeable. Charge fully for 24 hours before first use. NOVA can run up to 2 hours on a single charge.
2. To recharge, place device in the Charging/Drying Cradle as shown in the Closer Look section of this Guide. Then connect the USB end of the Charging Cord either to (i) a USB port in a computer or other USB power supply, or (ii) a wall adaptor and then plug into an electrical outlet. After the initial charge, recharge the NOVA only as needed.
3. When the NOVA's battery is due for a charge, the device will beep twice and the red Indicator lights will flash. If the device is fully discharged the device will power off.
4. As the battery charges, the first then the second red light will flash, followed by 2 continuous red lights when the NOVA is fully charged.
5. DO NOT overcharge which can shorten battery life. Disconnect the USB Cord from the power source when not charging the device.

Expert Advice NOVA



- 1. Should I use NOVA every day?**
In the beginning, use NOVA once per day. As your skin gets used to sonic cleansing, you may gradually increase usage.

For extra sensitive skin, we recommend using the included delicate sensitive antimicrobial brush head.

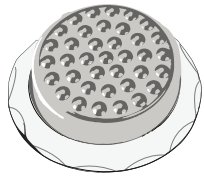

- 2. Serum Infuser Head:** Applies serums and creams onto the skin with maximum efficiency. Apply your favorite serum or cream to your face or directly to the infuser head, turn on device and allow the power of sonic to transport them to the deeper layers of the skin.



LOW




MEDIUM

HIGH

- 3. Which speed should I select?**
NOVA has 3 speed settings to customize your daily cleanse routine. For best results, start on low and gradually increase speed as your skin adjusts.



- 4. Automatic Timer.** NOVA has a built in "cleansing assistant timer" that will beep every 20 seconds to move to next area.

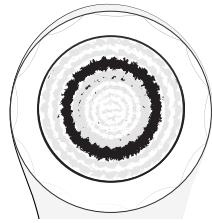

Expert Advice NOVA

- 5. How long do the brushes last?** NOVA's brushes have a patented antimicrobial protection that guards against 99% of stain and odor causing bacteria. NOVA brushes last twice as long as traditional cleansing brushes. **Replace your brushes every 6 months.** Wash your brush with a gentle cleanser between uses.



- 6. Which Cleanser should I use with NOVA?** You can use a cleanser that you know works well with your skin type. There is no need to purchase a special cleanser to use with NOVA. For best results, choose a gentle daily cleanser. Scrubs are not recommended as Nova already provides gentle exfoliation during use.



- 7. Shower Caddy.** NOVA comes with a Shower Caddy designed to keep your brush right where you need it, in the shower. **To install:** Clean and dry area to be installed. Peel backing from caddy and stick.

Warnings & Warranty

Warnings:

- DO NOT** place or store the Charger where it can fall or be pulled into a tub or sink.
- DO NOT** place the Charger in or drop it or the plug into water or other liquid. The Charger is not for immersion or for use in the shower or bath.
- DO NOT** reach for the Charger that has fallen into water. Disconnect immediately.
- DO NOT** use the product while plugged in to charge.
- Close supervision is necessary when this Product is used by, on, or near children or physically challenged persons.
- Use this Product only for its intended use as described in these Instructions for Use. **DO NOT** use attachments other than those recommended and provided by SPA SCIENCES.
- Keep the Charger away from heated surfaces.
- DO NOT** use this Product outdoors or where oxygen is being administered.
- Never operate this Product if it is damaged.
- DO NOT** use the Charger for recharging if the power cord or plug is damaged, the Charger is not working properly, or if the Charger has been dropped on the ground or into water.
- The Handle and Charger of this Product have no serviceable parts. Never attempt to open the Handle for any reason. If the Charger is damaged, it must be unplugged and replaced. Email customer service at customerservice@spasciences.com for instructions on how to obtain a replacement.
- Use this Product with the supplied Charger only.
- DO NOT** overcharge the battery which can shorten battery life.

Warranty:

Your warranty is not effective unless you register the Product within 90 days of purchase. To register go online to www.warrantyspasciences.com and complete the information required for registration.

For a period of one (1) year from the date of purchase, Spa Sciences (the "Company") warrants the NOVA Sonic Cleansing Brush (the "Product") against damage, defects or failure resulting from ordinary consumer use under normal home conditions according to the instructions included with the Product (a "Covered Defect"). This warranty DOES NOT include damage, defects or failure caused by misuse (continue next page)

Warranty

or improper care of the Product; impact or insertion of foreign objects into or on the Product; application of harmful chemicals or abrasives to the Product; failure to follow manufacturer's instructions; normal wear and tear; alteration or overuse of the Product; or any professional or commercial use of the Product. If there is a Covered Defect during the one (1) year warranty period the Company agrees to exchange the Product with a new equivalent Product. This is the sole remedy available for breach of this limited warranty. Any claim for breach of this limited warranty must be commenced within one (1) year following the original purchase. This limited warranty applies only to a purchase of the Product from or an authorized reseller, is valid for the original end user of the Product only and cannot be transferred under any circumstances.

THE PROVISIONS OF THE FOREGOING WARRANTIES ARE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR INDIRECT DAMAGES BASED UPON ANY LEGAL THEORY. SOME STATES DO NOT ALLOW LIMITS ON WARRANTIES, OR ON REMEDIES FOR BREACH IN CERTAIN TRANSACTIONS. IF APPLICABLE LAW DOES NOT PERMIT THE DISCLAIMER OF IMPLIED WARRANTIES, THEN THE DURATION OF SUCH IMPLIED WARRANTIES, ARE EXPRESSLY LIMITED TO THE DURATION OF THE EXPRESS LIMITED WARRANTY SET FORTH HEREIN.

Additional Info

The entire Operating Manual including safety, care and warranty information is available at www.novamannual.com

Email customer service at customerservice@spasciences.com

© 2020 Spa Sciences LP. All rights reserved.